


INF-BC4 OPERATION

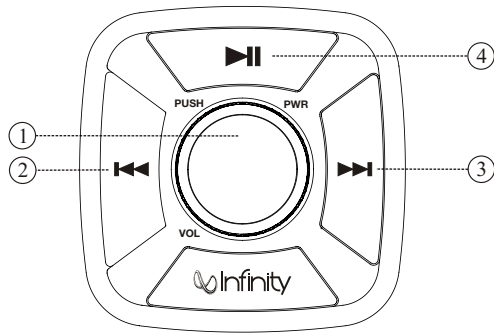

1. POWER ON/OFF button, VOL knob

- Press the knob to power the controller on or off.
- Turn right and left to adjust volume level.
(Remark: A beep tone indicates volume has reached maximum or minimum level.)

To establish Bluetooth connection

- Once the controller has been powered on, it will blink red and blue until a Bluetooth connection has been made.
 - Go to your digital media to turn Bluetooth on and then search for the INFBC4 address. Once paired, the controller will turn to a constant blue.
- ### 2. Track DN button
- Press it to select the previous track.
- ### 3. Track UP button
- Press it to select the next track.
- ### 4. Play/Pause button
- Simply press it to pause the playback.
 - Simply press it again to resume playback.

To Disconnect Bluetooth device

- Press and hold the PAUSE button for 3 seconds to disconnect from Bluetooth. The controller will flash red and blue when disconnected.
- After Bluetooth has been disconnected, press PAUSE button to reconnect the last paired device.

Cables configuration:

1. Red: +12V power supply with 2A fuse.
2. Black: GND.
3. Blue: REM OUT with constant 12V power supply.
4. White/Blue: REM IN for external remote control. With external remote control connected to REM IN, the BT Controller can also be powered on/off by that external remote control.)
5. Black: RCA Output.