 


# OPERATION OF REMOTE TOUCH PAD

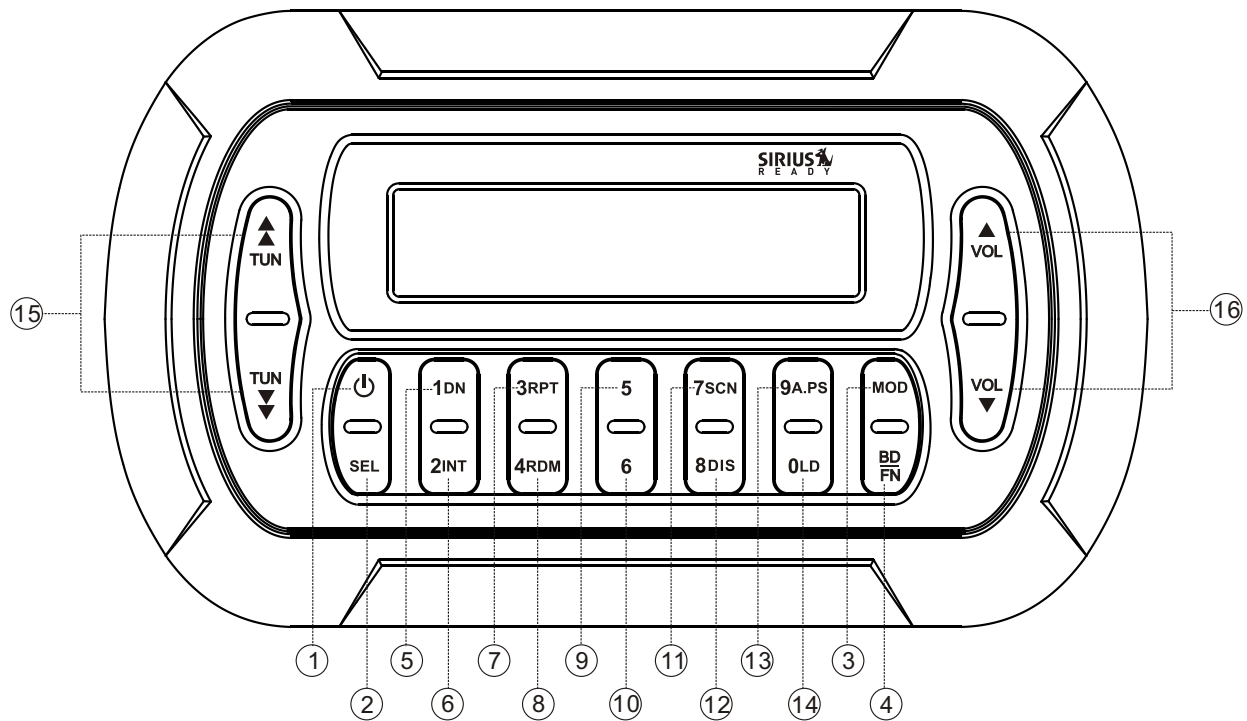

沿此线折叠

沿此线折叠

## Function and name

1. POWER ON / OFF button  
Press the PWR button (1) briefly to power on / off.
2. SELECT button  
Press SEL button (2) repeatedly to select the desired mode in the following order:  
VOL --> BAS --> TRE --> FAD.
3. MODE button (Radio-->USB/NAND-->CDC-->Sirius-->AUX)
4. BD / FN button  
In Radio mode, press BD/FN button (4) to select desired band FM1, FM2, FM3, AM1, AM2.  
In Sirius mode, press this button to select SIRIUS1 or SIRIUS2. Press it for 2 seconds to select between Direct and Category mode.
5. Track play / pause button, radio preset 1 button
6. Track intro scan button, radio preset 2 button
7. Track repeat button, radio preset 3 button
8. Track random play button, radio preset 4 button
9. Radio preset 5 button, also DISC UP.
10. Radio preset 6 button, also DISC DOWN.
11. SCAN button (#7 preset SIRIUS only)  
In Radio mode, press the SCAN (11) button to scan strong stations for a short introduction. At the desired station press this button again to stop scanning.
12. DISP (display) button (#8 preset SIRIUS only)  
Press DIS button (12) once to display the time.  
a. Press and hold the DIS (8) button until the time flashes on the display.  
b. Press VOL up to set hour.  
c. Press VOL down to set minutes.  
d. Press the DIS button again quickly to accept the adjusted time. If no button is pressed within 5 seconds, then it automatically accepts the adjusted time without further intervention from the user.
13. A.PS - Auto Preset Scan button (#9 preset SIRIUS only)  
Press and hold A.PS button (13) for 2 seconds to search for six strong stations and to automatically store them on buttons 1 - 6.
14. LOUD (loudness) button (#10 preset SIRIUS only)  
In order to emphasize the bass and the treble at low volume, press the LD (14) button. To turn off loudness, press the LD button again.
15. Tune UP/DOWN button  
Press Tune UP/DOWN button (15) to tune radio, satellite channels and the CD tracks up or down.
16. Volume UP/DOWN button  
Press VOL UP/DOWN button (16) to increase or decrease the sound level.

