LOWRANCE°

SonicHub™

Marine Audio Server
Installation Guide



Preface

FCC Statement

This equipment has been tested and complies with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a normal installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. This device must accept any interference received, including interference that may cause undesired operation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an output on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced technician for help.
- A shielded cable must be used when connecting a peripheral to the serial ports.

Changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment.

Warranty

The warranty card is supplied as a separate document.

It is shipped with the product registration card.

In case of any queries, refer to the brand web site of your display or system.

www.Lowrance.com

Declaration of Conformity

GB	Hereby, Navico Holding AS declares that this SonicHub is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.
FI	Navico Holding AS vakuuttaa täten että SonicHub tyyppinen laite on direktiivin 1999/5/EY oleellisten vaatimusten ja sitä koskevien direktiivin muiden ehtojen mukainen.
NL	Hierbij verklaart Navico Holding AS dat het toestel SonicHub in over- eenstemming is met de essentiële eisen en de andere relevante bepalingen van richtlijn 1999/5/EG.
FR	Par la présente, Navico Holding AS déclare que ce SonicHub est conforme aux exigences essentielles et aux autres dispositions de la directive 1999/5/CE qui lui sont applicables.
SE	Härmed intygar Navico Holding AS att denna SonicHub står i överens- stämmelse med de väsentliga egenskapskrav och övriga relevanta bestämmelser som framgår av direktiv 1999/5/EG.
DK	Undertegnede Navico Holding AS erklærer herved, at følgende udstyr SonicHub overholder de væsentlige krav og øvrige relevante krav i direktiv 1999/5/ EF.
DE	Hiermit erklärt Navico Holding AS, dass sich dieses SonicHub in Übereinstimmung mit den grundlegenden Anforderungen und den anderen relevanten Vorschriften der Richtlinie 1999/5/EG befindet. (BMWi)
GR	Με την παρουσα Navico Holding AS δηλωνει οτι SonicHub συμμορφωνεται προς τις ουσιωδεις απαιτησεις και τις λοιπες σχετικες διαταξεις της οδηγιας 1999/5/ΕΚ.
IT	Con la presente Navico Holding AS dichiara che questo SonicHub è conforme ai requisiti essenziali ed alle altre disposizioni pertinenti stabilite dalla direttiva 1999/5/CE.
ES	Por medio de la presente Navico Holding AS declara que el SonicHub cumple con los requisitos esenciales y cualesquiera otras disposiciones aplicables o exigibles de la Directiva 1999/5/CE.
PT	Navico Holding AS declara que este SonicHub está conforme com os requisitos essenciais e outras provisões da Directiva 1999/5/CE.

The equipment named in this declaration, is intended for use in international waters as well as coastal sea areas administered by countries of the E.U. and E.E.A. A full Declaration can be obtained from www.lowrance.com

Disclaimer

As Navico is continuously improving this product, we retain the right to make changes to the product at any time which may not be reflected in this version of the manual. Please contact your nearest distributor if you require any further assistance.

 It is the owner's sole responsibility to install and use the instrument and transducers in a manner that will not cause accidents, personal injury or property damage. The user of this product is solely responsible for observing safe boating practices.


NAVICO HOLDING AS. AND ITS SUBSIDIARIES, BRANCHES AND AFFILIATES DISCLAIM ALL LIABILITY FOR ANY USE OF THIS PRODUCT IN A WAY THAT MAY CAUSE ACCIDENTS, DAMAGE OR THAT MAY VIOLATE THE LAW.

Governing Language: This statement, any instruction manuals, user guides and other information relating to the product (Documentation) may be translated to, or has been translated from, another language (Translation). In the event of any conflict between any Translation of the Documentation, the English language version of the Documentation will be the official version of the Documentation.


This manual represents the product as at the time of printing. Navico Holding AS. and its subsidiaries, branches and affiliates reserve the right to make changes to specifications without notice.

Copyright © 2010 Navico Holding AS.

Check the parts

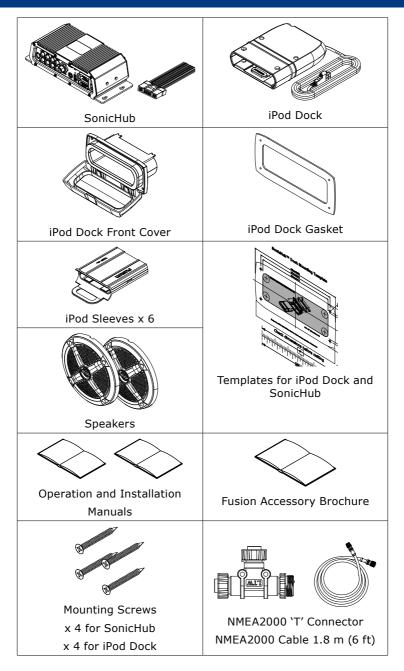


Required tools

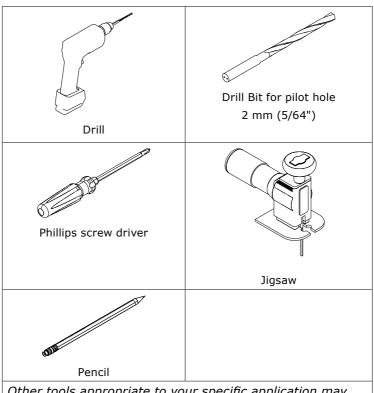



Installing the iPod dock

Panel Mounting

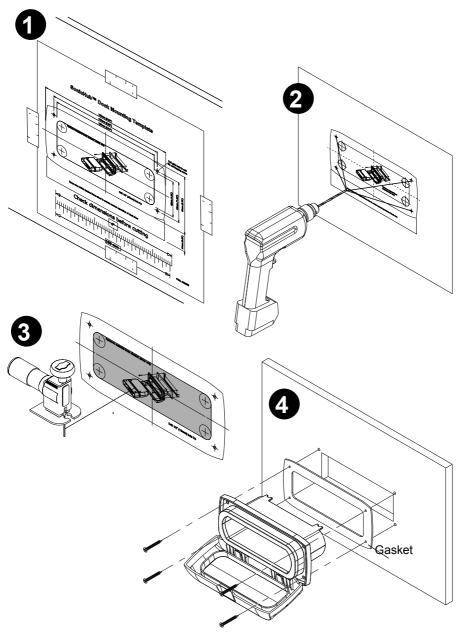

Using iPod dock sleeves

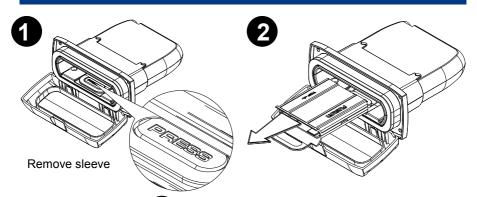

 





iPod	Top Sleeve	Bottom Sleeve
in 1 iii ii 20 00	 	Sieeve
iPod with video, 30 GB	A	A
iPod with video, 60 GB, 80GB	Α	В
iPod classic, 80 GB	В	Α
iPod classic, 160 GB (2007)	В	В
iPod classic, 120 GB	В	Α
iPod classic, 160 GB (2009)	В	Α
iPod touch,	D	D
iPod touch, 2nd gen (2009)	D	Α
nano, 3rd gen	Α	A+adapter
nano, 4th gen	E	E
nano, 5th gen	G	G
iPhone	F	F
iPhone 3G	F	F
iPhone 3GS	l F	F




Except iPod nano (gen3)

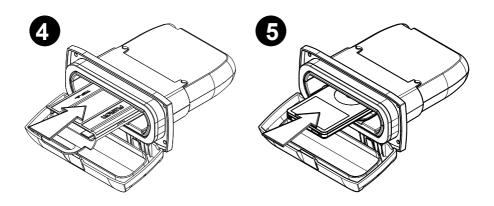


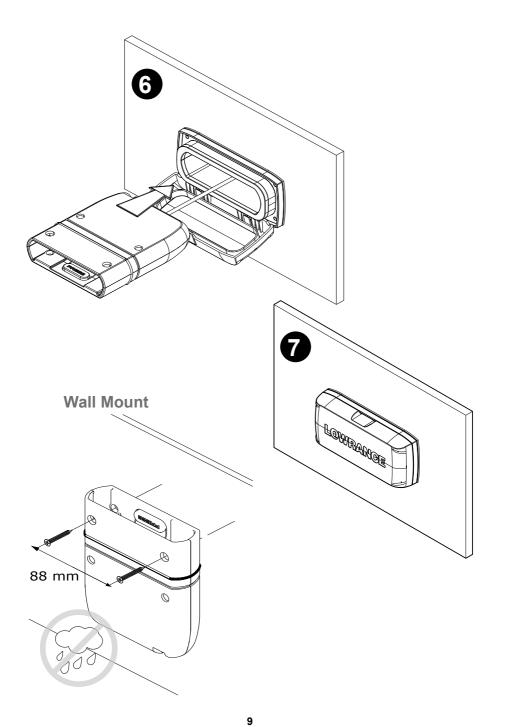


Using a USB flash drive

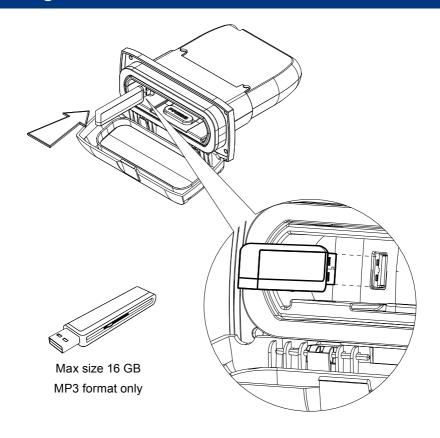


Installing the SonicHub

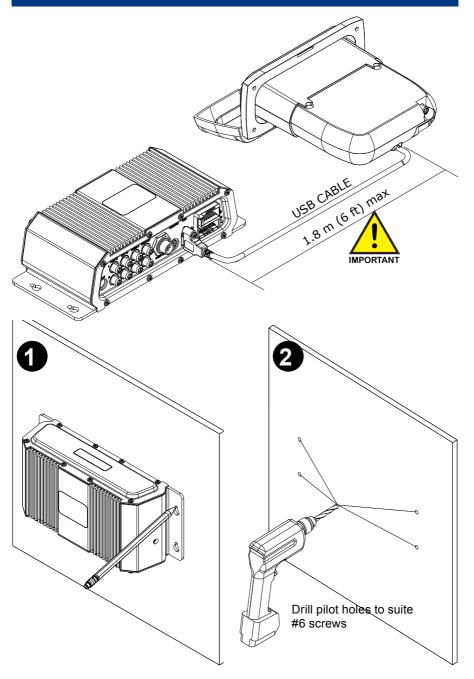


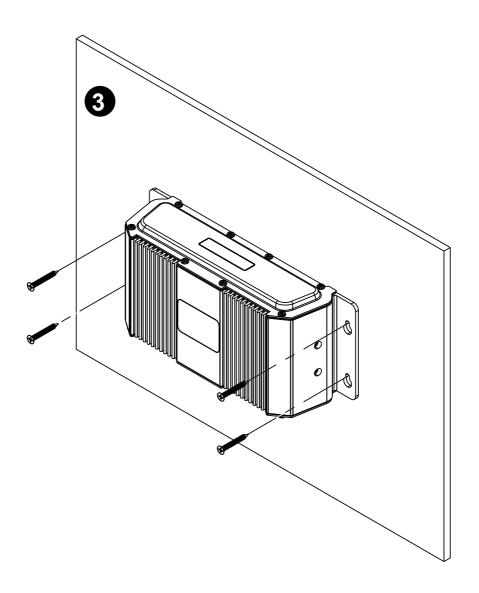


Wiring the SonicHub

Wiring Overview

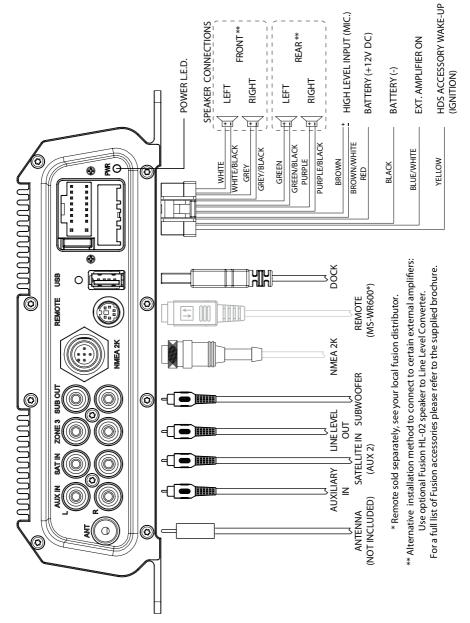

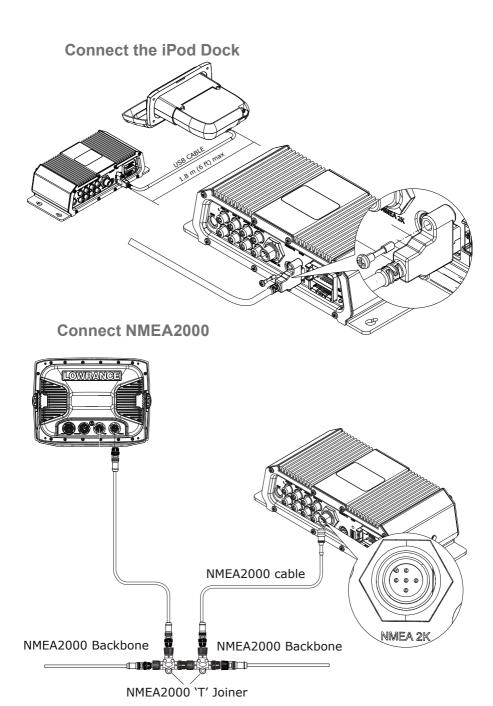


Connect Power

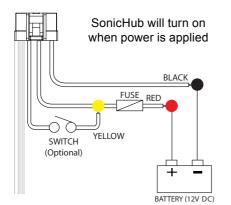




Always connect to power using a fuse or breaker 15 Amp

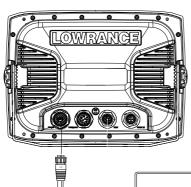


Connect Yellow wire to the yellow accessory wake up wire of the HDS. SonicHub will turn on when the HDS is turned on.

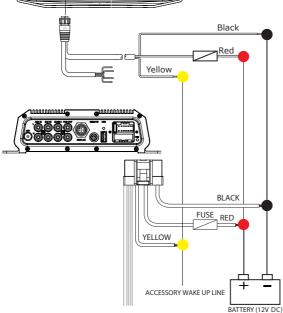

Connect SAT IN (AUX 2)

The **SAT IN** input can be from a LWX-1 weather module to listen to Sirius satellite radio. Or it can be connected to some other line level audio source (AUX2).

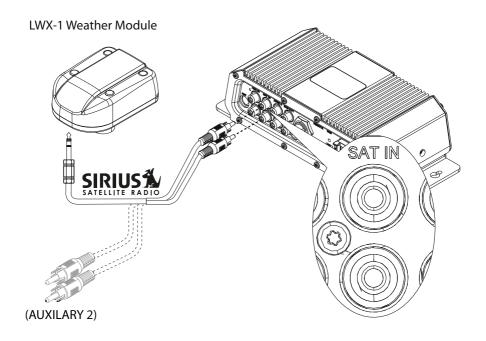


Connect to Line Level Amplifier

ZONE 3 is a Line level output that can be connected to and external amplifier. The output is linked to the master volume control.

EXT. AMP PWR ON

Connect to a Subwoofer


The **Sub Out** connection is a Mono Line Level output from both RCA connectors.

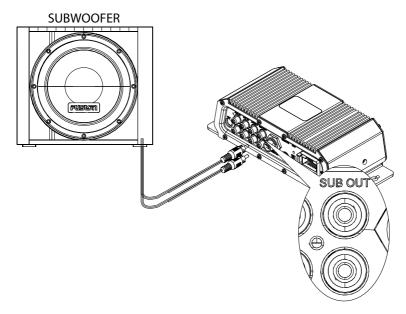


Connect MIC


MIC. Connection accepts a high level input (speaker level) as a source.


The example below shows how the SonicHub can be connected to the hailer output of the Lowrance LVR880 VHF. The PA function of the Hailer will broadcast from the SonicHub.

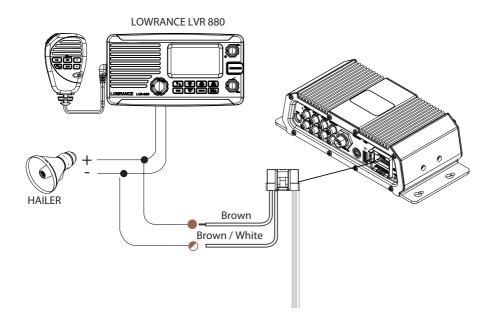


Dimensions

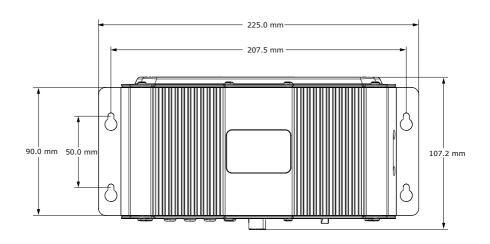

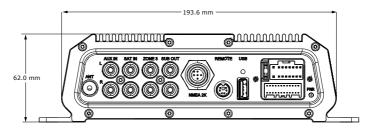

 

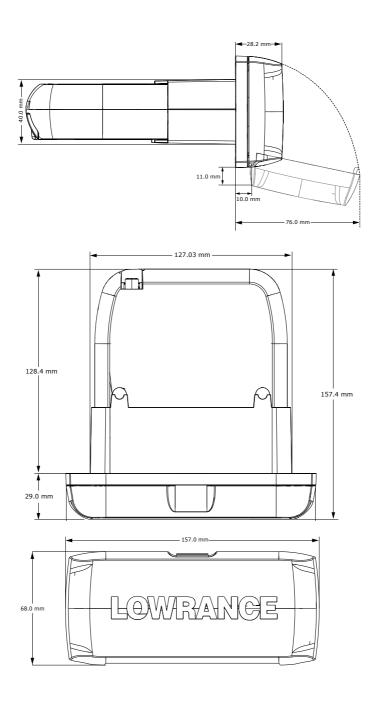

Specifications

General				
Dimensions (L x W x H)	107 x 225 x 62mm (4.2 x 8.9 x 2.4")			
Weight	.88kg (1.96 lbs)			
Waterproof Rating	IPX2			
Temperature	Operating: -20 to 60°C (-4 to 140°F)			
remperature	Storage: -40 to 80°C (-40 to 176°F)			
Compliance	FCC part B, Subpart J; CE per EN 60945; C-Tick			
AM Tuner				
Tuning Range	531 to 1611 kHz EU with 9kHz/step; 530 to 1710 USA with 10kHz/step			
Usable Sensitivity	28dBuV = 25uV			
Auto Seek Station sensitivity	<20dBuV			
Signal to Noise ratio	50dB @ 60dBuV signal			
Ultimate S/N ratio	>60dB @ 80dBuV signal			
Distortion	<0.4% @ 60dBuV signal, 80% modulation			
Adjacent Channel selectivity	33dB @ Adjacent channel = 9kHz offset, 30% modulation. SINAD = 26dB			
Alternate Channel selectivity	50dB @ Alternate channel = 18kHz offset, 30% modulation. SINAD = 26dB			
FM Tuner				
Tuning Range	76.0 to 90.0MHz EU with 50kHz/step; 87.4 to 108.0MHz USA with 100kHz/step			
Usable Sensitivity	28dBuV = 25uV			
Auto Seek Station sensitivity	-6.5dBuV = 0.5uV for 30dB S/N ratio			
Signal to Noise ratio	50dB @ 10dBuV signal			
Ultimate S/N ratio	>70dB @ 60dBuV signal			
Distortion	<0.1% @ 10dBuV signal			
Adjacent Channel coloctivity	30dB @ SINAD = 30dB, 40dBuV signal strength. 400Hz tone, 40kHz deviation.			
Adjacent Channel selectivity	Adjacent channel = 100kHz offset, 1kHz tone, 40kHz deviation.			
Altomato Changel as Is attivity	63dB @ SINAD = 30dB, 40dBuV signal strength. 400Hz tone, 40kHz deviation.			
Alternate Channel selectivity	Adjacent channel = 100kHz offset, 1kHz tone, 40kHz deviation.			

Audio Amplifier				
Output Music Power per Channel	50W			
Total Output Music Power	200W			
Signal-to-Noise Ratio (unweighted, 20Hz to 20kHz)	96dB			
Total Harmonic Distortion (1W output,	0.04% typical			
4 ohm load, 20Hz to 20kHz)	<0.1% max			
Power Supply Requirements	10 to 16V DC			
Current (Muted)	<250 mA			
Current (Max)	<15 A			
AUX Input/Outputs				
	Stereo AUX line input for CD/DVD/ MP3;			
	Stereo AUX line input for SIRIUS;			
ALLY 1 In. CAT IN (ALLY 2 In), DCA	RCA Stereo Line Output			
AUX 1 In; SAT IN (AUX 2 In); RCA Output; Subwoofer Out	Mono line output for Subwoofer; Mono Line Input for intercom (MIC), alarm,			
	ALL levels are 1Vrms.			
Antenna Connection	Standard Motorola Radio Male Plug			
USB/MP3	Industry Standard			

Visit our website:

www.lowrance.com



© Copyright 2010 All Rights Reserved Navico Holding AS