


# Spa22 Speaker

## Install Guide

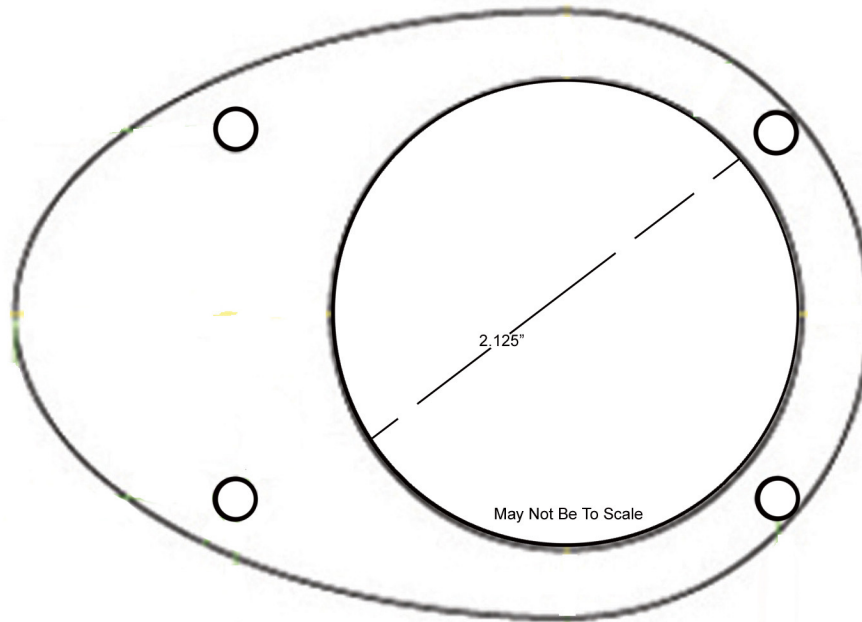

- 1- Find a flat location for speaker placement
- 2- Use template dimensions for proper spacing
- 3- Cut 2.125" hole
- 4- Position speaker & mark screw holes
- 5- Drill 1/16" pilot holes for screws
- 6- Position U-clip nut over end of screw & tighten, if needed
- 7- Connect pos. wire (+) to pos. tab (marked white or red)
- 8- Connect neg. wire (-) to neg. tab
- 9- Apply bead of non-caustic sealant to rear speaker flange (if desired)
- 10- Secure speaker with provided hardware

**NOTE:** Do Not Allow Silicone Sealant to Squeeze or Make Contact w/ Rear of Speaker Cone

### Specifications

Power: 25WMax

Imp: 4 ohm

Wt. <1#

Mounted Depth : 1.25"

IP65 / REACH / RoHS / CE



PO Box 6351

Ventura, CA 93006

805.794.6475 info@pqnEnterprises.com

### Warranty Policy

PQN Audio products are warranted to be free of manufacturing defects for a period of one (1) year. Warranty is subject to proper installation & application. Warranty does not cover exposure to excessive chemical usage or operational abuse. Return defective product prepaid to point of purchase for replacement or refund as determined by PQN. Warranty is not transferable. Proof of Purchase must be included.

